

ASSEMBLY INSTRUCTION

REMOVE ALL ITEMS FROM THE CARTON. VERIFY ALL PIECES BEFORE ASSEMBLY.

PARTS LIST


KEY	QTY	DESCRIPTION
1	5	CASTER
2	1	BASE
3	1	SEAT POST
4	1	PLASTIC BELLOW
5	1	SEAT
6	1	BACKREST
7	2	P.U. ARMREST
8	8	OUTER BUSHINGS
9	2	ARMREST SCREW

PREVENTIVE MAINTENANCE AND WARNING

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- DO NOT USE CHAIR AS STEP STOOL/LADDER.
- DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE TIGHT.
- AT LEAST EVERY SIX MONTHS, CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.
- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- FAILURE TO FOLLOW THESE WARNINGS CAN RESULT TO SERIOUS INJURY.

Mechanism Operating Instruction While Seated:


1. **SEAT HEIGHT ADJUSTMENT:** Pull lever up to raise or lower seat. Release lever when desired height is obtained.
2. **TILTING:** Pull lever outwards to tilt and push inwards to lock tilting function.
3. **TILT TENSION KNOB:** To adjust the tilt tension of your chair. Rotate the knob clockwise/counter-clockwise based on body weight.

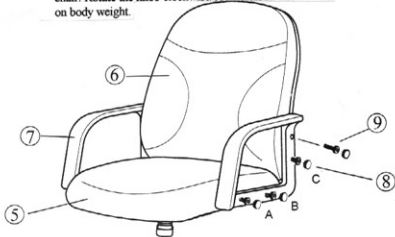

⚠ Don't forget to tighten all pre-assembled screws on backrest & seat (A, B & C).

STEP 2.

- Lift (6) backrest in an upright position. Align (7) P.U. armrest to upper holes of (6) backrest and screw-in with (9) armrest screws. Securely tighten the pre-assembled (9) armrest screws at the (6) backrest. Cover armrest holes with (8) outer bushings. The (5) seat is already pre-assembled with the (7) P.U. armrest.

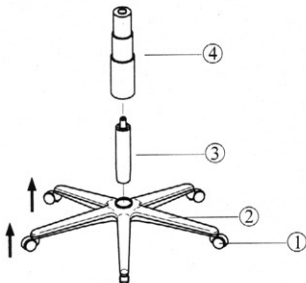

STEP 1.

- Insert (1) casters into (2) base. Insert (3) seat post into (2) base. Slide (4) plastic bellow over (3) seat post.



STEP 3.

- Place upper assembled portion of chair into (3) seat post.